




simply screw Doorseal to base of door

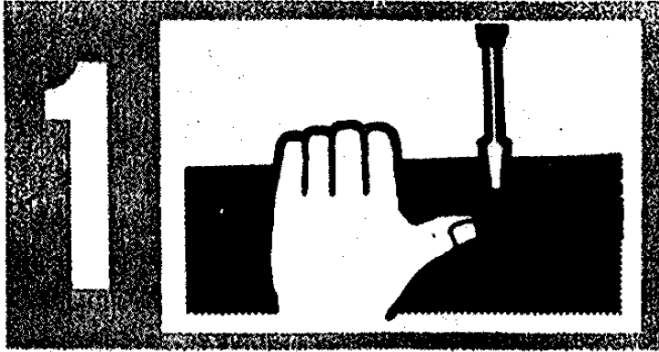


Fit channel to bottom of door flush with the inside face and recessed end at leading edge as shown. Fix with 1" x 8G round head wood screws provided.

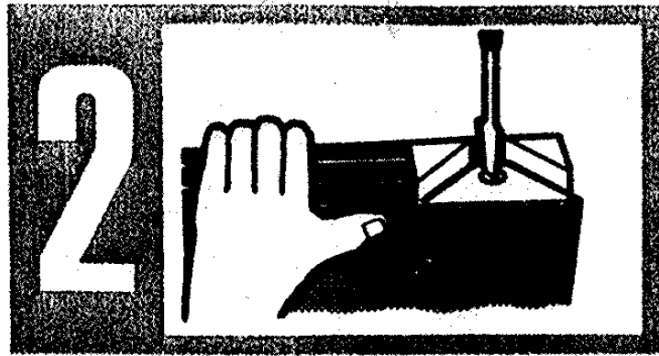


Fit nylon deflector block in recess at end of channel and in line with the inside runway of the channel. Fix with 1½" x 8G counter-sunk screw provided.

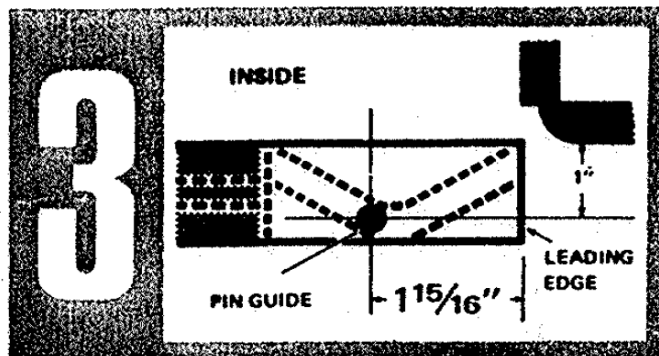


With door hard against jamb, mark leading edge on floor. Remove door. Mark position of pin guide as shown.

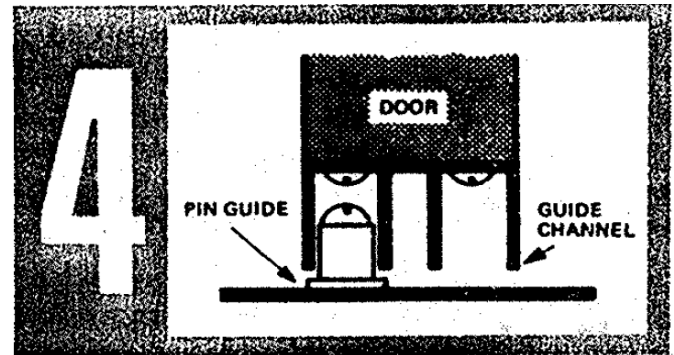

Fix pin guide in position marked, with 2" x 10G round head wood screw with washer between guide and floor. Under all conditions pin guide should engage with nylon deflector block as shown. If fitted over a carpet, suitable packing should be introduced to ensure correct engagement.

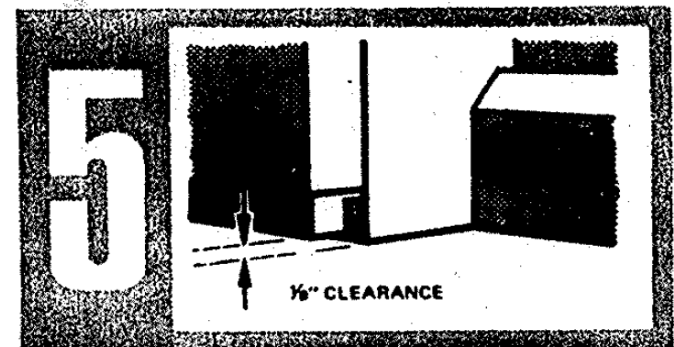

Hang door to door gear (following the appropriate Instructions) with pin guide located within inside runway. Slide door to closed position. Adjust door gear to ensure that door is hanging plumb and level with 3mm (1/8") clearance from the ground.

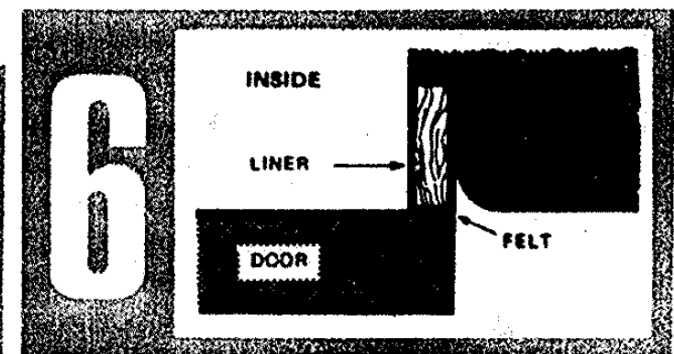

Temporarily fit the liners (not by P.C.H. Ltd.), to touch the face of the door at sides and head.

Note:— The liners can be edged with felt or similar resilient material, if desired. Operate the door to ensure that a seal between door and liners is evident. Adjust liners if necessary, and finally fix securely in position.