



## FITTING INSTRUCTIONS - NOTICE DE POSE - MONTAGE HANDLEIDING - MONTAGEANLEITUNG INSTRUZIONI DI MONTAGGIO - INSTUCCIONES DE MONTAJE

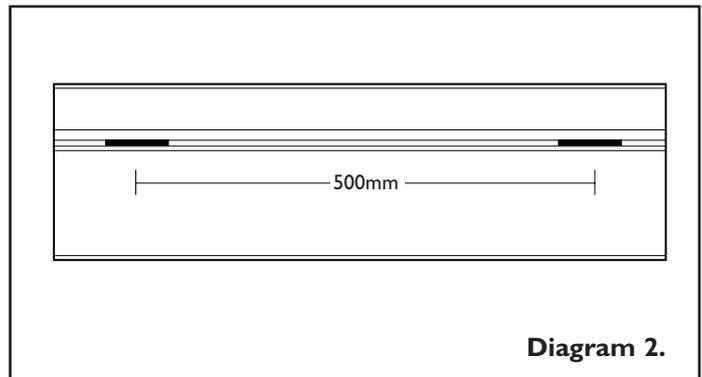

1. Insert the polymer clips provided into the fascia in the correct orientation, see diagram 1.
2. Ensure that the clips are placed at 500mm intervals along the length of the fascia, see diagram 2.
3. Hook the fascia onto the track and push firmly into place. Ensure all of the clips are engaged to the track, see diagram 3.

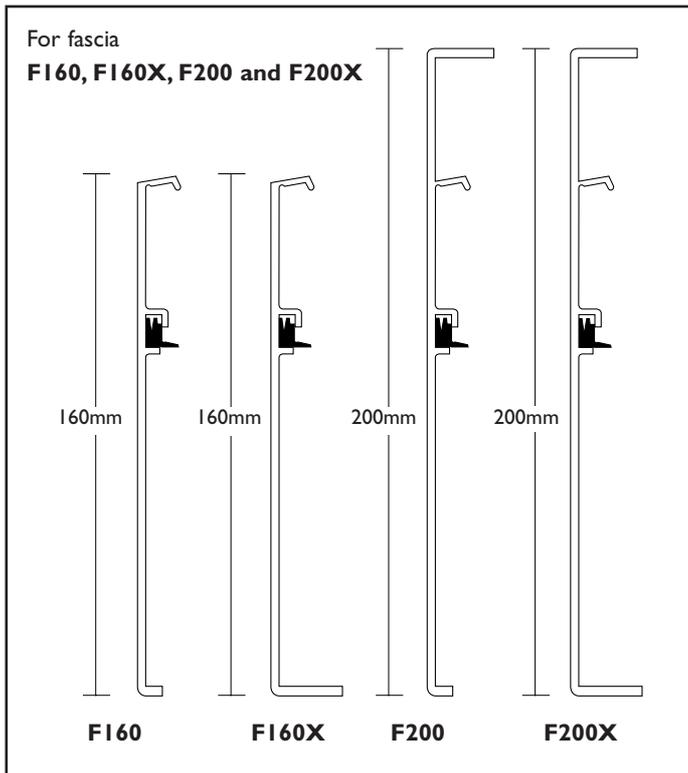